

# VANQUISH®

## SEAT QUICK-INSTALL INSTRUCTIONS

Your Mansfield Vanquish toilet comes with the seat's side hinge assembly pre-installed. Mounting the seat unit to the bowl's side hinge assembly is the only installation required.

**1.** Remove the seat unit from the packaging.


**Parts Key:**

**A - Seat Arm**

**B - Side Hinge Assembly (pre-installed)**


**C - Hinge Rod**

**2.**

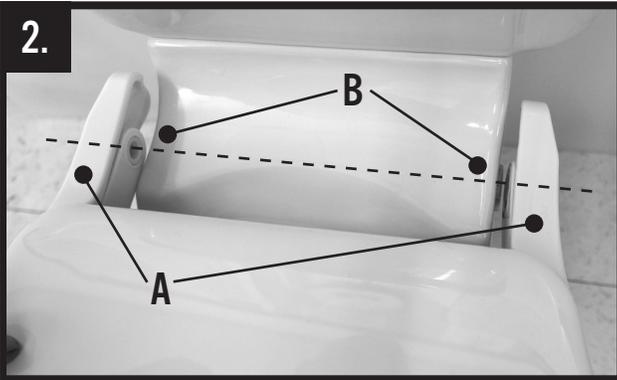

Place the seat unit on the toilet bowl, aligning the seat arms (A) with the pre-mounted hinge assembly on the bowl (B).


**3.**

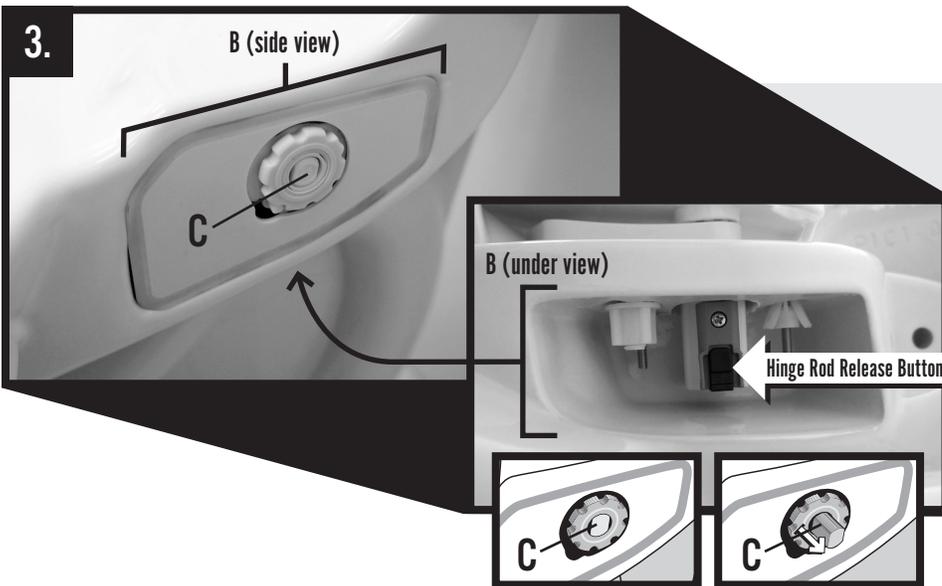

Reaching under the side hinge assembly on each side of the seat and bowl, depress the black button in the assembly mechanism to release the hinge rod (C) and secure the hinge assembly to the seat arm.

*If the hinge rods do not immediately engage with the seat assembly, gently maneuver the seat up/down/forward/backward to line up the hole and allow the hinge rods to engage fully (you will hear a click). If the hinge rod accidentally extends outside of the seat assembly, simply push it back in and begin again.*

**4.**

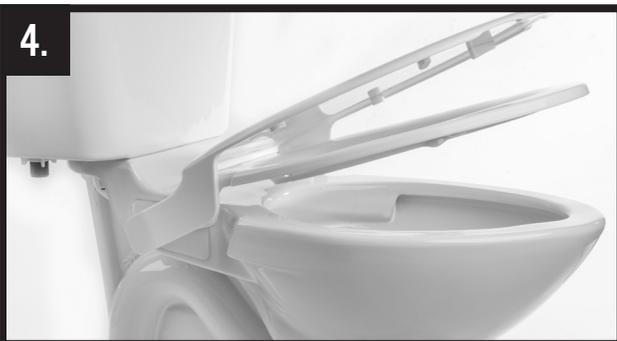


Test for proper installation of the seat unit by raising the seat and cover, releasing them and allowing the slow close feature to lower them back down to a closed position.


**INSTRUCTIONS FOR REMOVAL AND REPLACEMENT OF THE VANQUISH® SIDE-MOUNT SEAT**



Lower both seat and cover

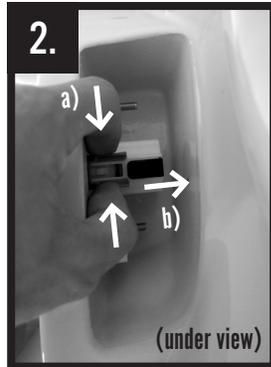


(under view)

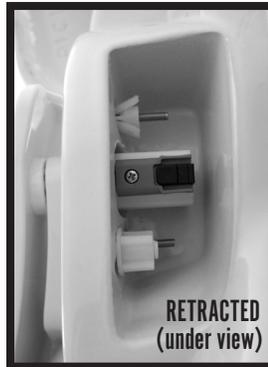

RETRACTED  
(under view)

(a) the right side is BLUE and the left side is YELLOW.

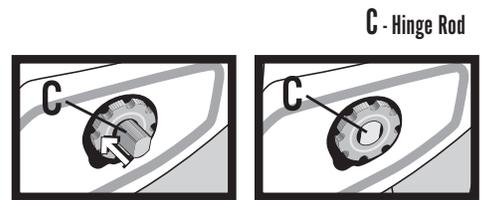

- Under each side of the toilet deck,**
- a) firmly grasp and pinch together the “flashlight” style button mechanism.
  - b) Slide the buttons inward to retract hinge shaft until it secures into the retracted position and clicks.

**After both sides are retracted, the seat is free to lift out of place. To replace the seat, follow steps 2 - 4 on the front of this installation instruction sheet using the new seat unit.**

**TROUBLESHOOTING**

**If your toilet seat or cover does not stay standing when lifted:**

**1. Ensure that your tank is installed properly.**

The bottom of the tank should be in contact with the top of the bowl. Contact should occur with the sanitary bar evenly and completely across the front of the tank and also at the center of the back of the tank. If a gap exists between the tank and bowl at either location, the tank bolts must be tightened down further. Using a 7/16” socket at 1/4 turn increments, progressively tighten the bolts until the tank touches the sanitary bar as described above. **DO NOT OVERTIGHTEN** or you may fracture the tank. Once you are certain there is proper contact between the tank and bowl, lift the seat again to check if this adjustment was effective.

**If the seat or cover continues to fall when lifted:**

**2. Adjust the hinge assembly.**

- a) Follow the instructions above to remove the seat.
- b) On both sides of the bowl, remove the nut that secures the hinge assembly face plate; then remove the plate.





NUT

(under view)



- c) Loosen the stainless steel screws three full turns (two screws per side/hinge assembly).
- d) Shift each hinge assembly forward and upward until they will move no further, then retighten the screws.
- e) Replace the hinge assembly face plates, secure the nuts, and reinstall the seat.

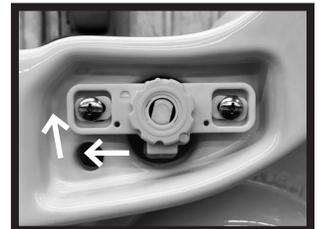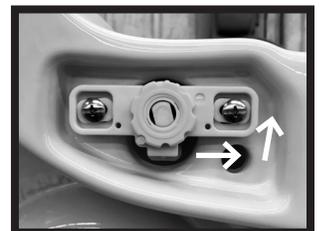

**Your seat and cover should now stand properly.**